


MEZZANINE LADDER FITTING

Assembly instruction

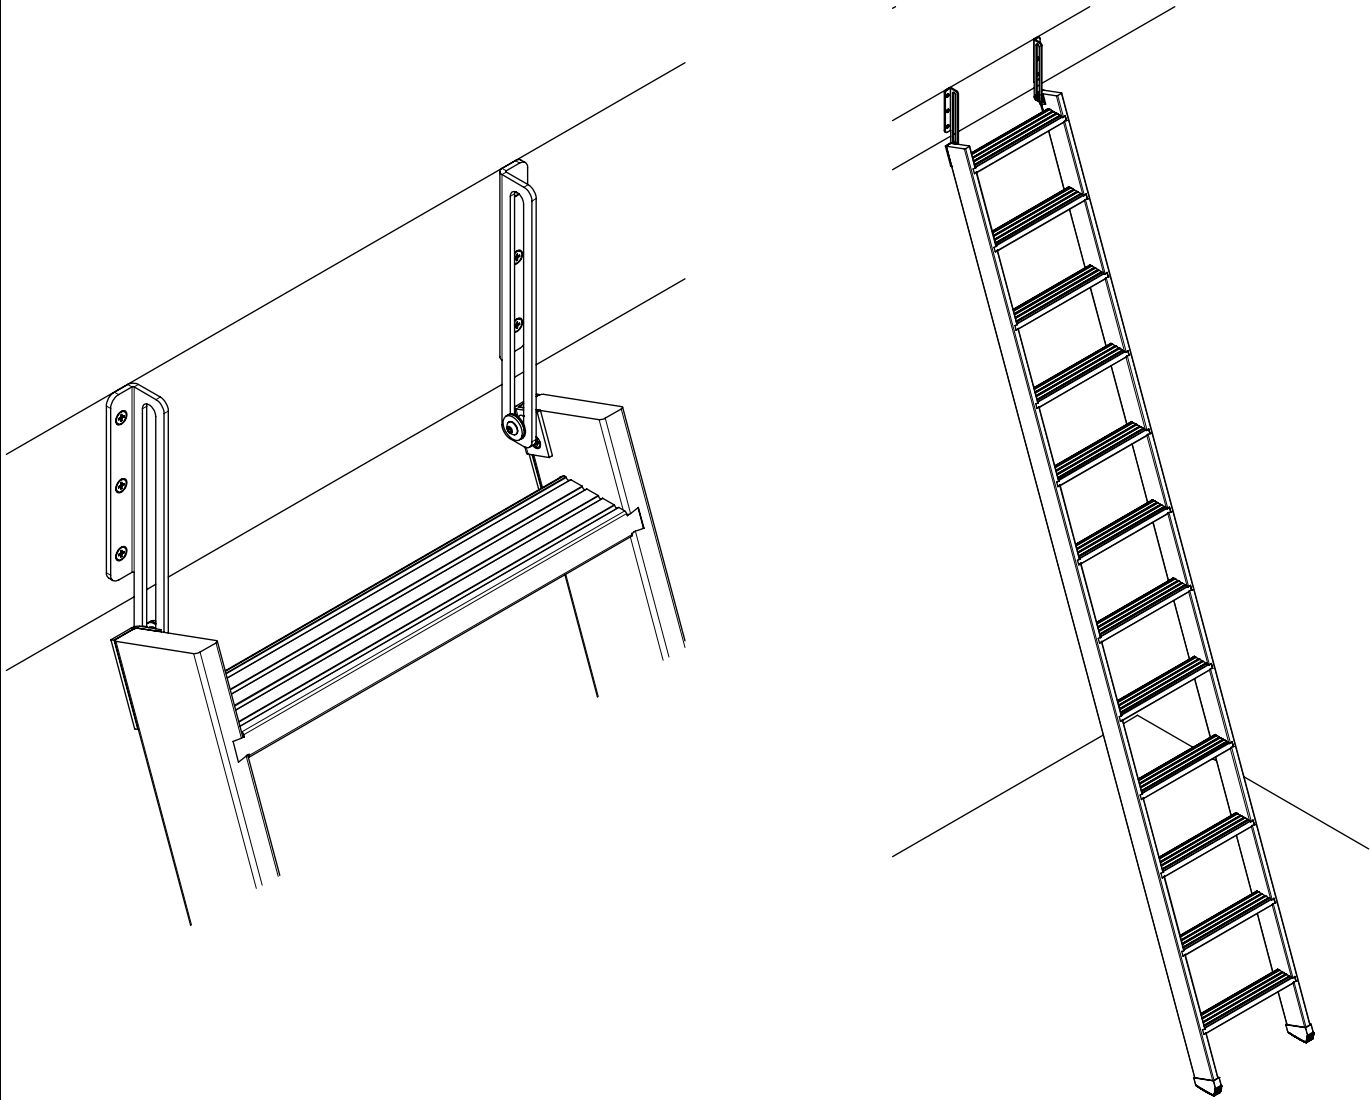

1 x 1 K1-1009001 <i>RAL 9005</i> K1-1009003 <i>RAL 9016</i> K1-1009005 <i>FZB/BZP</i>	2 x 1 K1-1009000 <i>RAL 9005</i> K1-1009002 <i>RAL 9016</i> K1-1009004 <i>FZB/BZP</i>	3 x 1 K2-1009010 <i>RAL 9005</i> K2-1009012 <i>RAL 9016</i> K2-1009014 <i>FZB/BZP</i> 22 x 2 K3-06066 $\varnothing 4 \times 20$ PZ2	4 x 1 K2-1009011 <i>RAL 9005</i> K2-1009013 <i>RAL 9016</i> K2-1009015 <i>FZB/BZP</i> 23 x 4 K3-06038 $\varnothing 4 \times 30$ PZ2	5 x 2 K1-1009020 20 x 2 K3-10360 <i>RAL 9005</i> K3-10361 <i>RAL 9016</i> K3-02270 <i>FZB/BZP</i> M5 x 12 24 x 6 K3-08002 $\varnothing 8 \times 40$	6 x 2 K1-1009021 21 x 2 K3-10370 <i>RAL 9005</i> K3-10371 <i>RAL 9016</i> K3-04130 <i>FZB/BZP</i> $\varnothing 18/\varnothing 5.5 \times 2$ 25 x 6 K3-06005 $\varnothing 5 \times 50$
---	---	--	--	--	---

